




# INSTALLATION GUIDE

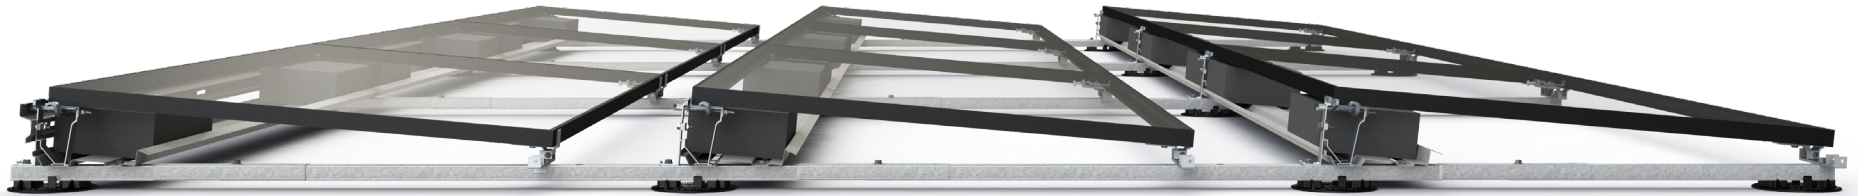

## UL 3741 PV Hazard Control Installation Addendum

© 2022 by Unirac, Inc. All rights reserved.



# INSTALLATION GUIDE

---

## TABLE OF CONTENTS

INTRODUCTION .....	1-2
CERTIFICATION & MARKINGS .....	3
SYSTEM COMPONENTS.....	4
APPROVED INVERTERS .....	5-6
INSTALLATION METHODS.....	7
CONFIGURATION-1.....	8
CONFIGURATION-2.....	9
CONFIGURATION-3.....	10
CONFIGURATION-4.....	11
WIRE MANAGEMENT .....	12-13

## INTRODUCTION

This manual describes the procedure to install the GridFlex 5 product to meet the requirements of the UL3741 PV Hazard Control Standard. This manual also applies to GridFlex 5 systems that include supplementary bays and/or mid span supports. All installers must thoroughly read this manual and have a clear understanding of the installation procedures prior to installation. Failure to follow the methods and procedures outlined in this manual may result in injury and/or damage to property.

The GridFlex 5 Photovoltaic Hazard Control System (PVHCS) is a UL 3741 Listed system that complies with NEC 690.12(B)(2)(1), when installed by qualified individuals as per the installation procedures described in the GridFlex 5 System installation manual and this addendum. In the following pages of this addendum, various example configurations of system designs that comply with 690.12(B)(2) are mentioned.

### **Brief Background of 2020 NEC 690.12**

As per 2020 NEC 690.12 Rapid Shutdown of PV Systems on buildings, All PV arrays installed on or in buildings shall include rapid shutdown functions to reduce shock hazard for Fire Fighters (FF) in accordance with 690.12(A) through (D):

### **Brief Background of UL3741**

UL3741 provide a means for evaluation of PV Hazard Control components, equipment and systems that provide a reduced level of shock hazard from energized PV system equipment and circuits located within the PV array after the operation of hazard control initiation function(s) where required, such as but not limited to any PV Rapid Shutdown Equipment (PVRSE) or PV Rapid Shutdown Systems (PVRSS) that comply with UL 1741 in the United States and CSA C22.2 No 330 in Canada.

### **Controlled Conductors for Rapid Shutdown**

- DC circuits of PV system
- Inverter output circuits originating from inverters located within array boundary

### **Controlled Parameters for Rapid Shutdown**

- Outside Array Boundary:  $\leq 30V$  within 30 seconds
- Inside Array Boundary:
  - (1) Listed PV Hazard Control System (UL 3741)
  - (2) PV array with appropriate wire management to limit conductive parts exposure. *See pages 12 & 13*

**IMPORTANT:** Requirements for PV arrays addressed in UL 3741 are intended for compliance with the National Electrical Code (NEC), NFPA 70, 2017 and later editions and their requirements for controlling electrical shock hazards inside the array boundary as addressed in NEC section 690.12(B)(2), Rapid Shutdown of PV Systems on Buildings and with the Canadian Electrical Code (CE Code) C22.1. The inverters listed in the “Approved Inverters” section within this PVHCS additionally comply with the 30V in 30 seconds requirements outside the PV array as required in 690.12 (B)(1).

## DEFINITIONS

### INITIATION DEVICES

Device(s) that initiate the rapid shutdown function of the PV system

### EQUIPMENT

Equipment that performs rapid shutdown functions other than initiation devices, such as listed disconnect switches, circuit breakers, or control switches.

### ARRAY

NEC defines the array as a mechanically and electrically integrated grouping of modules with support structure, including any attached system components such as inverter(s) or dc-to-dc converter(s) and attached associated wiring. This indicates the GridFlex 5 Racking and collocated inverters are part of the array.

### ARRAY BOUNDARY

Per NEC 690.12(B), the zone extending 1ft from array in all directions. This indicates that the array boundary can extend 1ft from the edge of the GridFlex 5 racking, inverter or module.

## INSTALLER'S RESPONSIBILITY

- Ensure that GridFlex 5 and other products are appropriate for the specific installation and are designed for the installation environment.
- Ensure all electrical installation and procedures should be conducted by a licensed and bonded electrician or solar contractor.
- Comply with all applicable local or national building and fire codes, including any that may supersede this manual.
- Ensure provided information is accurate and appropriate. Issues resulting from inaccurate and inappropriate information are the installer's responsibility.
- Ensure the system is grounded and bonded to meet the requirements of the National Electric Code.
- Disconnect AC power before servicing or removing modules, AC modules, microinverters and power optimizers.
- Ensure routine maintenance of a module or panel shall not involve breaking or disturbing the bonding path of the system and all work must comply with national, state and local installation procedures, and safety standards.
- If loose components or loose fasteners are found during periodic inspection, re-tighten immediately. Any components showing signs of corrosion or damage that compromise safety must be replaced immediately.
- Ensure bare copper grounding wire does not contact aluminum and zinc-plated steel components, to prevent risk of galvanic corrosion.
- Review module manufacturer's documentation for compatibility and compliance with warranty terms and conditions.
- Use only Unirac parts or parts recommended by Unirac; substituting parts may void any applicable warranty.
- Installers must refer to the GridFlex 5 installation manual for complete installation instructions.

**⚠ WARNING**

**IDENTIFIES CONDITIONS OR PROCEDURES,  
WHICH IF NOT FOLLOWED, COULD RESULT IN  
SERIOUS INJURY, DEATH, OR PROPERTY DAMAGE.**

**⚠ CAUTION**

**IDENTIFIES CONDITIONS OR PROCEDURES,  
WHICH IF NOT FOLLOWED, COULD RESULT IN  
SERIOUS DAMAGE OR FAILURE OF EQUIPMENT.**

CONFORMS TO STD ANSI/UL 3741


Maximum Photovoltaic Hazard Control System (PVHCS) Voltage: 1000V

UL3741 LISTED



## MARKINGS

Certification marking is located on the North Rail as shown

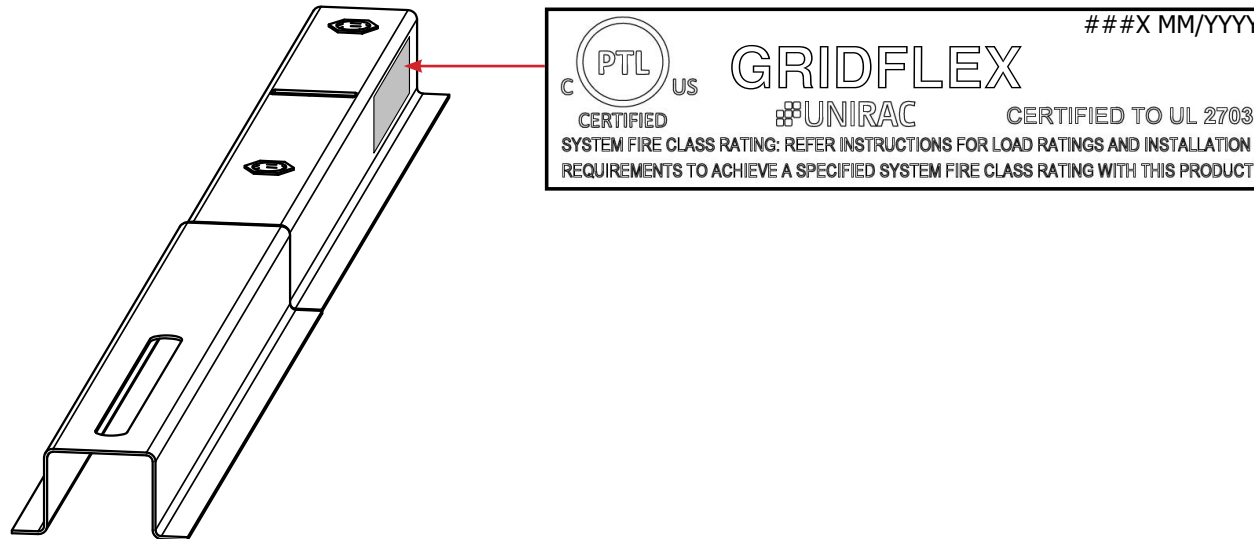

**Following are the list of approved PV Hazard Control Equipment or Components evaluated at 1000V Max System Voltage:**

*(Not all listed items must be implemented in a single system to achieve compliance to UL3741. Rather these are the items approved for use to meet the criteria outlined in this manual)*

## **1. MODULES**

All Modules listed in GridFlex 5 Installation Guide with max module area of 29.49 ft<sup>2</sup>

## **2. GridFlex 5 System Components**

- South Rail (Unirac PN:360030)
- Mid Rail (Unirac P/N: 360020)
- North Rail (Unirac P/N: 360010)
- Ballast Tray (Unirac P/N: 360071/360081/360101)
- South Clamp (Unirac P/N: 360050)
- North Clamp (Unirac P/N: 360042/360043)
- Wind Deflectors (Unirac P/N: 360100/360090/360102)
- Roof Pad (Unirac P/N: 360060 )
- Mid Supports (Unirac P/N: 360200)

## **3. Wire Clips (UL 62275 Listed)**

Hellermann Tyton Cable Ties & Edge Clips (Mnfr PNs CTT60R0HSC2, 156-02224 & 156-02226)

**4. PV Connectors (UL 6703 Listed) shall be compatible and approved for the application.**

**5. PV Wire (UL 4703 Listed)**

**6. RayTray v2 Solar Wire Management System (UL 870 Listed)**

## **7. Listed Conduit (all sizes apply)**

- Electrical Metallic Tubing (EMT) (Sizes 3/4" and greater) (UL 797 Listed)
- Rigid Metal Conduit (RMC) (Sizes 3/4" and greater) (UL 6 Listed)
- Intermediate Metal Conduit (IMC) (Sizes 3/4" and greater) (UL 1242 listed)
- Flexible Nonmetallic Conduit (Sizes 3/4" and greater) (UL1660 Listed)
- PVC - Schedule 40 or 80 (Sizes 3/4" and greater) (UL 651)

### APPROVED ELECTRICAL INVERTERS (UL 1741 LISTED)

Inverters that were evaluated to meet the rapid shutdown requirements in conjunction with other components as part of a PVRSS, such as attenuators and/or initiation devices, must be installed with those components to comply with UL 3741 systems.

MANUFACTURER	MODEL
<b>Canadian Solar Inverters</b>	CSI-50KTL-CT
	CSI-60KTL-CT
	CSI-30KTL-GS-FLB
	CSI-40KTL-GS-FLB
	CSI-60KTL-GS-B
	CSI-25K-T480GL01-UB
	CSI-30K-T480GL01-UB
	CSI-36K-T480GL01-UB
	CSI-40K-T480GL01-UB
	CSI-50K-T480GL01-UB
	CSI-60K-T480GL01-UB
	CSI-66K-T480GL01-UB
	CSI-75K-T480GL02-U
	CSI-80K-T480GL02-U
	CSI-90K-T480GL02-U
	CSI-100K-T480GL02-U
	CSI-25K-T480GL03-U
	CSI-36K-T480GL03-U
	CSI-40K-T480GL03-U
	CSI-50K-T480GL03-U
	CSI-60K-T480GL03-U
CSI-75K-T480GL03-U	
CSI-80K-T480GL03-U	
CSI-90K-T480GL03-U	
CSI-100K-T480GL03-U	
<b>Chint Inverters</b>	CPS SCA25KTL-DO/US-208
	CPS SCA36KTL-DO/US-480
	CPS SCA50KTL-DO/US-480
	CPS SCA60KTL-DO/US-480
	CPS SCA25KTL-DO-R/US-480

MANUFACTURER	MODEL
<b>Fronius Inverters</b>	Fronius Symo Advanced 10.0-3 208-240 (may be followed by Lite)
	Fronius Symo Advanced 12.0-3 208-240 (may be followed by Lite)
	Fronius Symo Advanced 15.0-3 480 (may be followed by Lite)
	Fronius Symo Advanced 20.0-3 480 (may be followed by Lite)
	Fronius Symo Advanced 22.7-3 480 (may be followed by Lite)
	Fronius Symo Advanced 24.0-3 480 (may be followed by Lite)
<b>NEP</b>	Neptune30K
	Neptune33K
	Neptune36K
	Neptune40K
	Neptune50K
	Neptune60K
	Neptune75K
Neptune100K	
<b>SMA Inverters</b>	STP 50-US-40
	STP 33-US-41
	STP 50-US-41
	STP 62-US-41
	STP 20-US-50
	STP 25-US-50
STP 30-US-50	

**APPROVED ELECTRICAL INVERTERS (UL 1741 LISTED) Continued**

MANUFACTURER	MODEL
<b>Solectria Inverters</b>	SolectriaRenewablesPVI25TL-208 SolectriaRenewablesPVI25TL-480-R SolectriaRenewablesPVI50TL-480 SolectriaRenewablesPVI60TL-480 PVI-36TL-480-V2
<b>Sungrow Inverters</b>	SG36CX-US SG60CX-US
<b>Solis Inverters</b>	Solis-25K-US (followed by -US-SW, -US-F-SW or -US-LSW) Solis-30K-US (followed by -US-SW, -US-F-SW or -US-LSW) Solis-36K-US (followed by -US-SW, -US-F-SW or -US-LSW) Solis-40K-US (followed by -US-SW, -US-F-SW or -US-LSW) Solis-50K-US (followed by -US-SW, -US-F-SW, -US-F-LSW or -US-LSW) Solis-60K-US (followed by -US-F-SW, or -US-F-LSW) Solis-66K-US (followed by -US-F-SW, or -US-F-LSW) S5-GC75K-US S5-GC80K-US S5-GC90K-US S5-GC100K-US S6-GC25K-US S6-GC30K-LV-US S6-GC33K-US S6-GC36K-US S6-GC40K-US S6-GC50K-US S6-GC60K-US

MANUFACTURER	MODEL
<b>GoodWe Inverters</b>	GW50K-SMT-US GW60K-SMT-US GW6000A-MS GW7600A-MS GW8600A-MS GW9600A-MS GW5000-MS-US30 GW6000-MS-US30 GW7600-MS-US30 GW9600-MS-US30 GW11K4-MS-US30



---

## INSTALLATION METHODS PER UL 3741 AND NEC 690.12

The following PV Design configurations are recommended by Unirac to show GridFlex 5 system comply with NEC 690.12(B). Compliance is not limited to these configurations.

**CONFIGURATION 1:** Array(s) with Listed UL 3741 PV Hazard Control System – *See page 8*

**CONFIGURATION 2:** Array(s) with Listed UL 3741 PV Hazard Control System & Sub Array(s) with MLPE(s) – *See page 9*

**CONFIGURATION 3:** Array(s) with Listed UL 3741 PV Hazard Control System & Sub Array(s) within same Array Boundary – *See page 10*

**CONFIGURATION 4:** Array(s) with Listed UL 3741 PV Hazard Control System & Sub Array(s) Controlled using String Isolation Devices – *See page 11*


### Controlled Parameters after Rapid Shutdown Initiation for all configurations

**Outside Array Boundary:** ≤ 30V within 30 seconds

**Inside Array Boundary:** ≤ 1000V

**CONFIGURATION-1**

*Array(s) with Listed UL 3741 PV Hazard Control System*

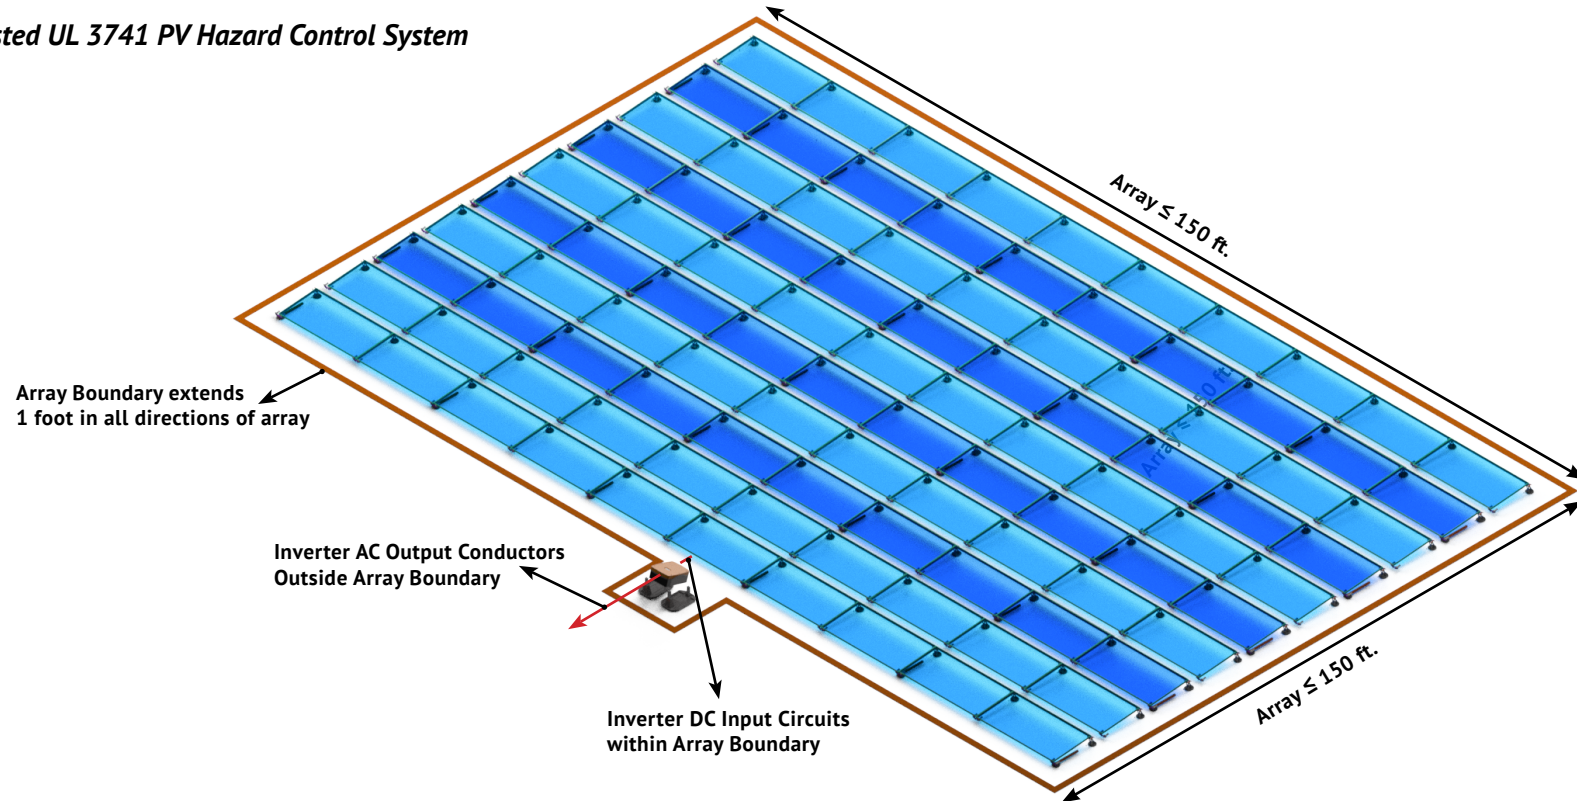

1. By using listed UL3741 PVHCS, array(s) complies with NEC 690.12(B)
2. Inverter output circuits (AC) that are outside of the array boundary and comply with NEC 690.12(B)(1) once rapid shutdown is initiated.
3. After Rapid Shutdown Initiation, inverter input circuits (DC) do not require additional measures to reduce string voltages per NEC 690.12(B)(2)(1) as they are within the array boundary.


**NOTE:**

For controlled parameters information See page 7

Example array not specifically verified by Intertek.

**CONFIGURATION-2**

*Array(s) with Listed UL 3741 PV Hazard Control System  
& Sub Array(s) with MLPE(s)*

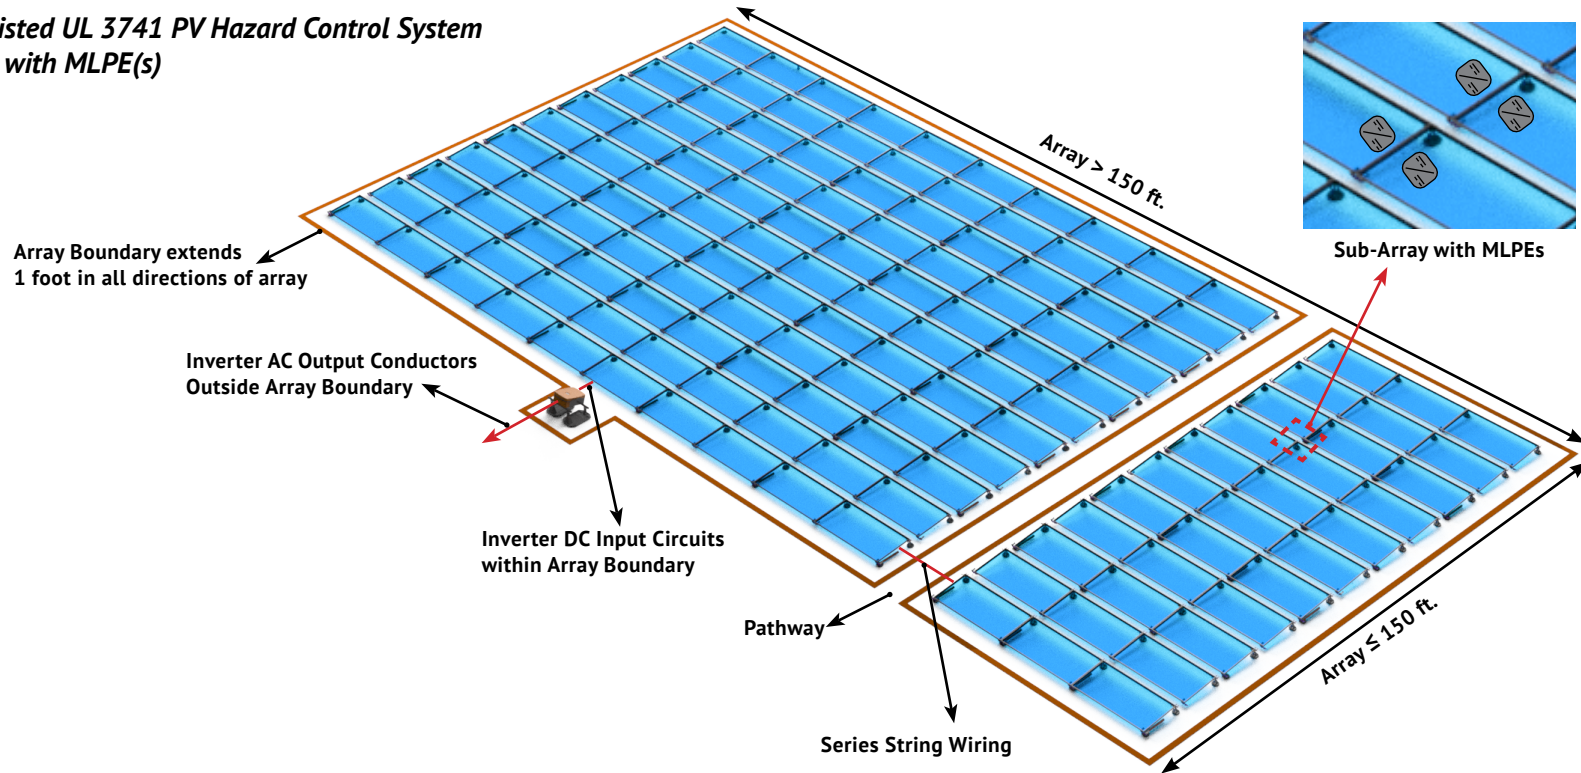


1. Array(s) uses UL3741 listed PVHCS and complies with 690.12(B)(1)
2. Sub array(s) uses MLPE(Module Level Power Electronics) and complies with 690.12(B)(2) by maintaining
  - a.  $\leq 80V$  within 30 seconds inside array boundary
  - b.  $\leq 30V$  within 30 seconds outside the array boundary

**NOTE:**  
It is imperative to thoroughly review installation instructions for both the MLPE device and Inverter to verify that both devices comply with UL1741 Rapid Shutdown requirements while using MLPE devices.  
Example array not specifically verified by Intertek.

**CONFIGURATION-3**

*Array(s) with Listed UL 3741 PV Hazard Control System  
& Sub Array(s) within same Array Boundary*

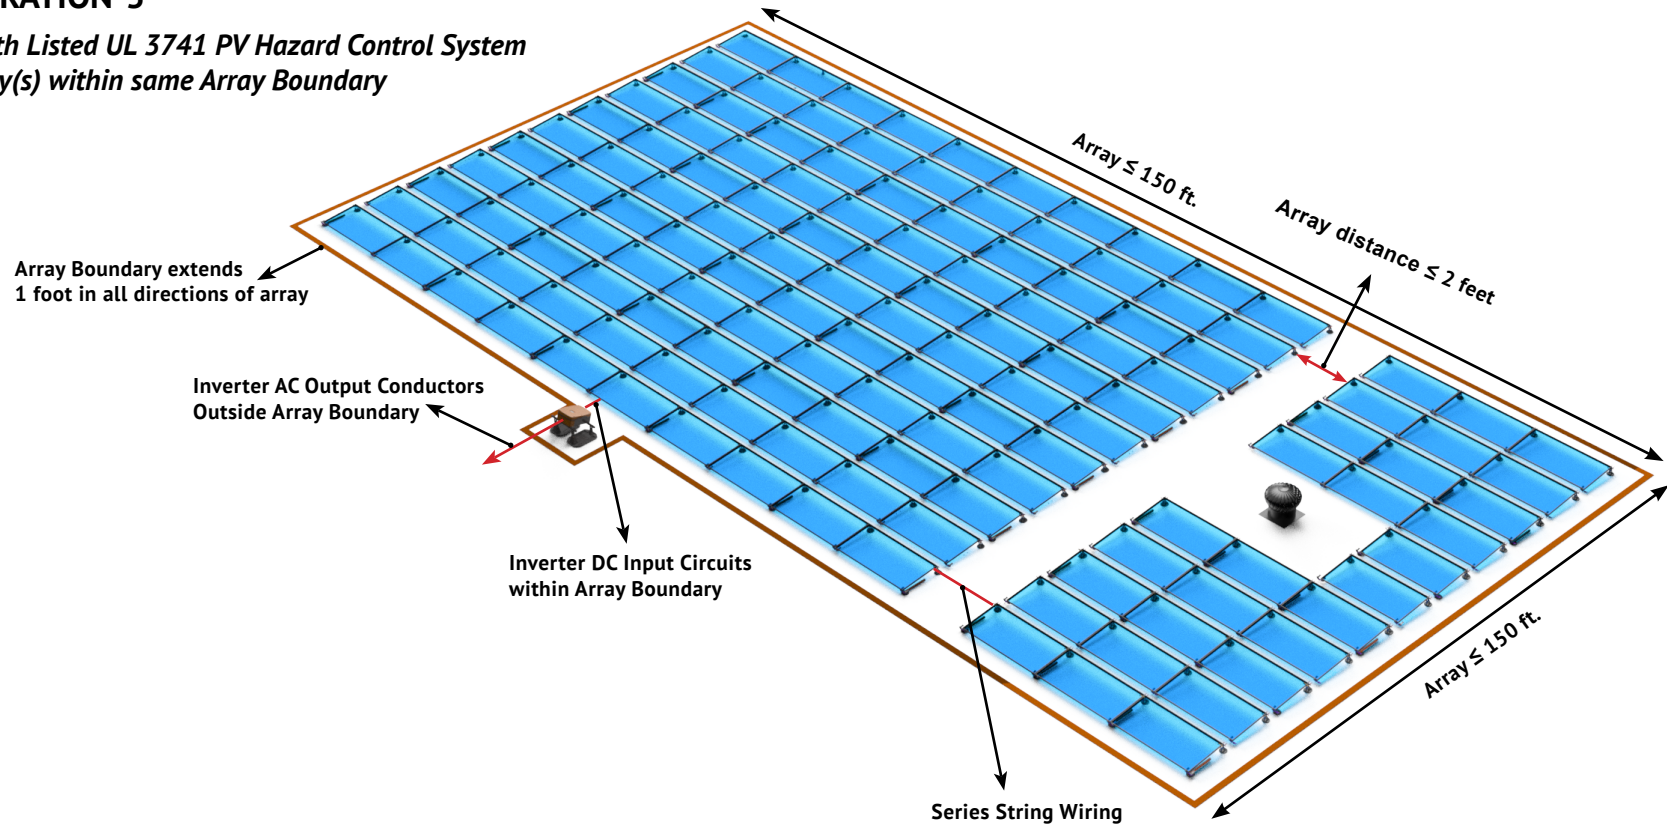


1. When array(s) and all array components are located not more than 2 feet apart, this results in a single array boundary.
2. Array(s) and sub array(s) uses UL3741 listed PVHCS and complies with 690.12(B)(2)(1)

**NOTE:**  
For controlled parameters information See page 7  
Example array not specifically verified by Intertek.

**CONFIGURATION-4**

*Array(s) with Listed UL 3741 PV Hazard Control System  
& Sub Array(s) Controlled using String Isolation Devices*

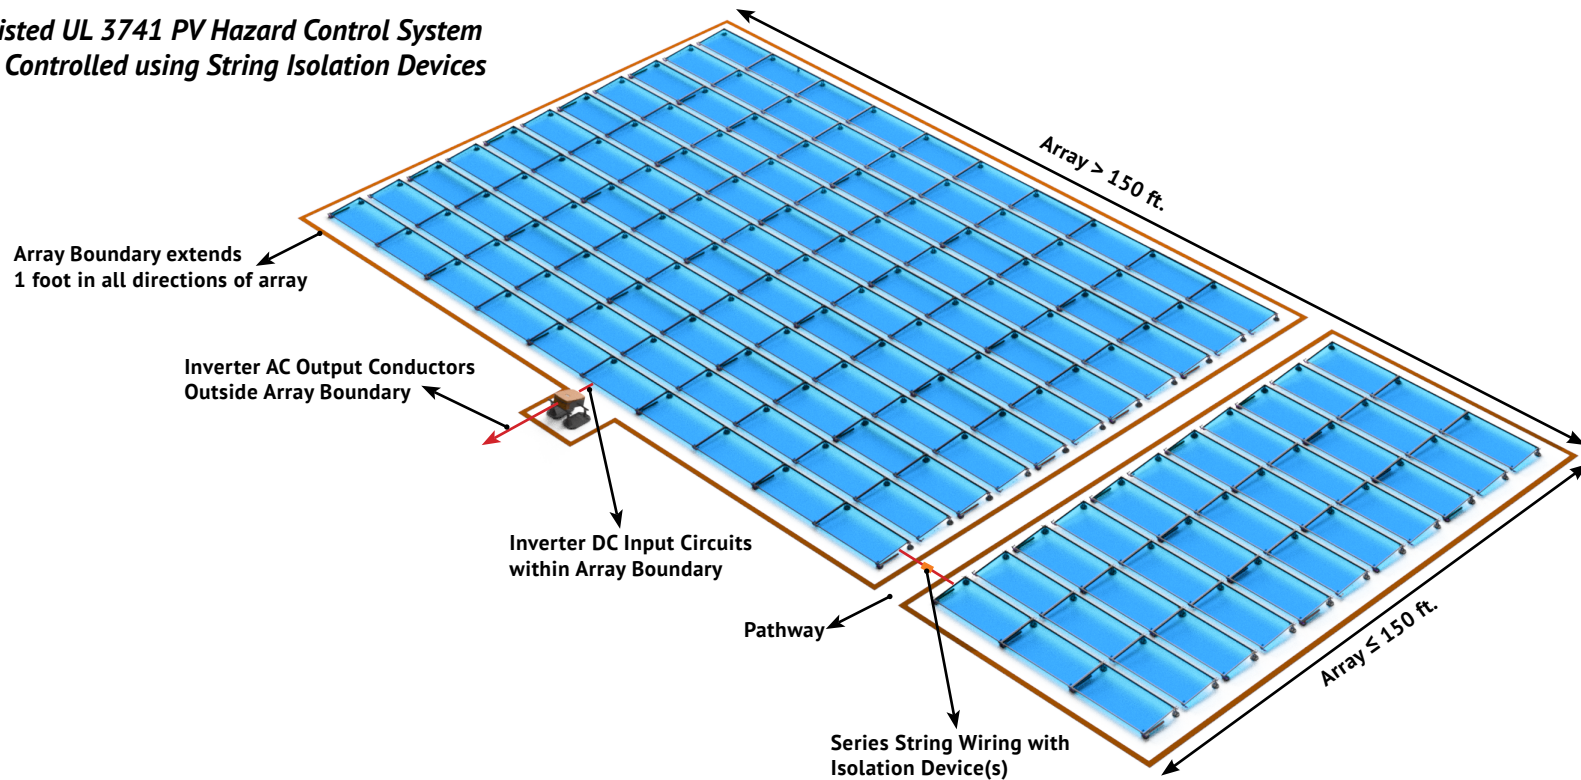

1. Array(s) uses UL3741 listed PVHCS and complies with 690.12(B)(2)(1)
2. Use a single isolation device to connect the sub array.
3. Use isolation devices on both sides of the pathway to connect partial strings.
4. String Isolation Device(s) control conductors outside of the array boundary.

**NOTE:**

For controlled parameters information See page 7  
Example array not specifically verified by Intertek.

## UL 3741 WIRE MANAGEMENT GUIDELINES


The GridFlex 5 wire management components noted in the list of approved PVHCS equipment on **page 4** were evaluated and approved for providing wire protection against potential FF interactions. To achieve wire protection as required per UL 3741, all wires shall be routed such that they are not exposed to potential FF interactions. It is achieved using:

### WIRE CLIPS


- Route wires under modules using approved wire clips. *See figure 1.*
- Do not allow wires to sag between clips.
- Do not overtighten or pinch wires.
- Utilize wire clips to prevent contact between the wire and the metallic components of the module and racking system.

### WIREWAY


- Protect wires in exposed areas such as inner row spaces and pathways by utilizing the listed wireway options on **page 4** (RayTray, conduit, etc.). *See figure 2*
- Ensure that PV wire is not exposed to sharp edges when entering or exiting listed wireway.

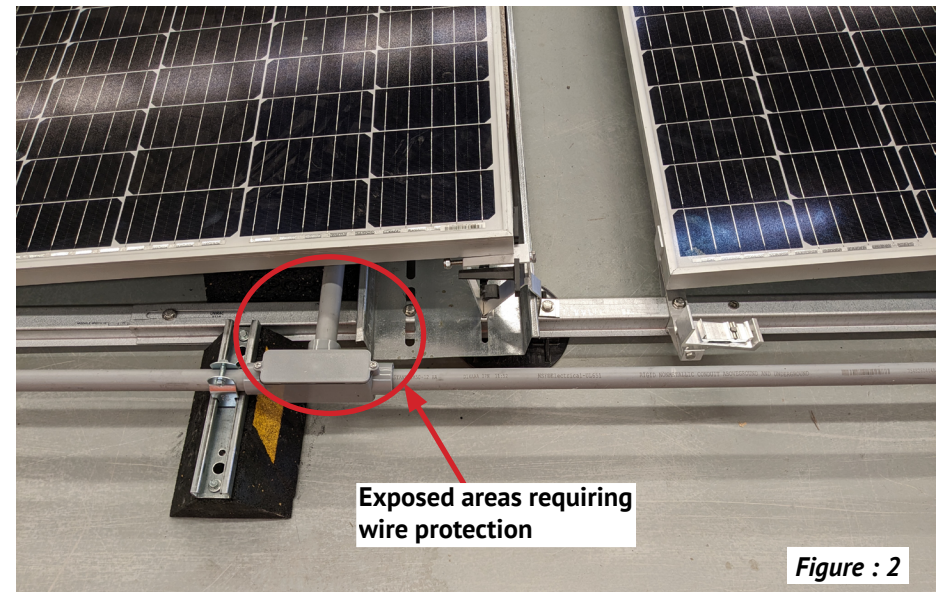

WIRE MANAGEMENT OPTIONS

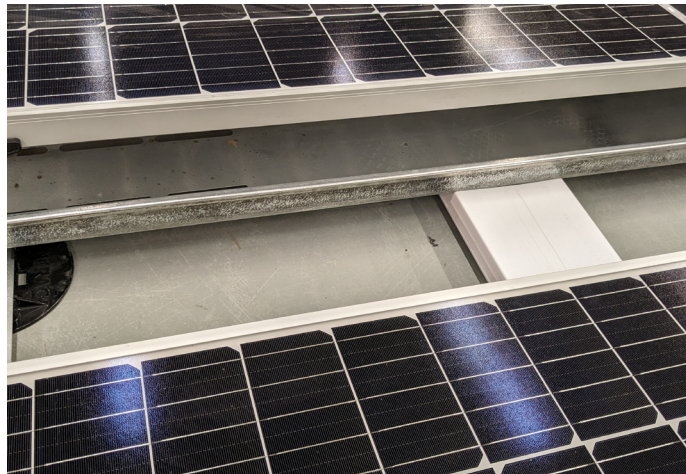

OPTION 1: USING RAYTRAY OR ECOTRAY

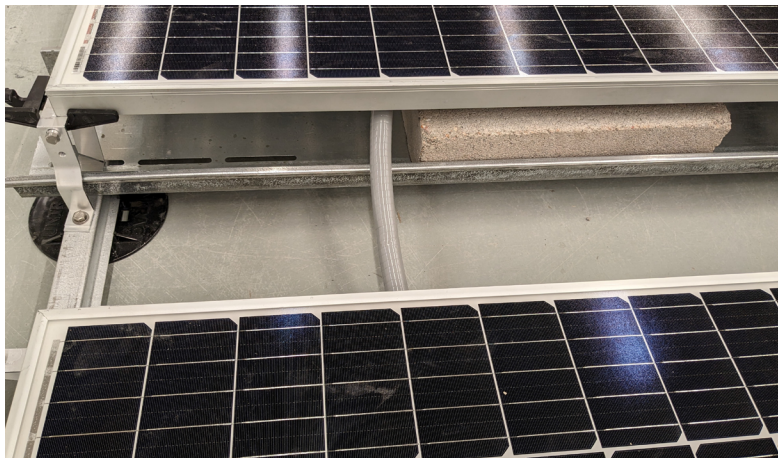

OPTION 2: USING FLEXIBLE NONMETALLIC CONDUITS

